

# ENERGY SMART FEATURE WALL INSTALLATION INSTRUCTIONS



**WHAT'S INCLUDED:** (4) graphics, template, hardware and fasteners

**TOOLS NEEDED:** drill, 1/4" drill bit, level, masking tape, 5/32" allen key

Use tape to apply template to wall in desired location. Make sure it's level.

Drill holes through indicated areas to match studded graphics.

**WANT TO WATCH AN INSTALL VIDEO?**  
Scan this code with your phone:





The center graphic is mounted with standoffs.




If your standoff holes fall on studs, attach with just screws.



The provided screws are already mated to drywall anchors.

If your installation doesn't require the anchor, simply unscrew the screw by holding the anchor with pliers and backing the screw out with an allen key.

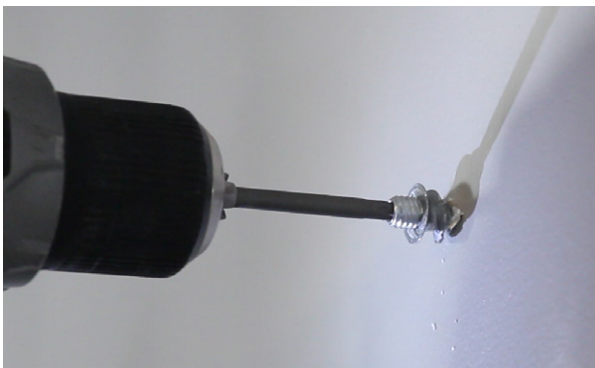


Install anchors or screws into drywall



The screw holds the barrel of the standoff to the wall.



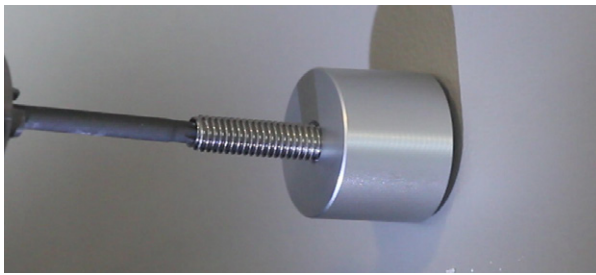

Insert the threaded rods about ¼” into the standoff barrels.



Add spacers on top of background layer of middle section.



Remove the white paper backer from the top clear layer of the middle section.



Add clear acrylic panel and install screw caps as shown.



Don't forget to remove the protective film from the face of the acrylic panel before finishing up.



Remove tape liner and insert threaded rods into pre-drilled holes. Using hands only, be sure to press firmly to create a strong bond to the wall.

**QUESTIONS? MISSING OR BROKEN PIECES?** Please contact [cmhmarket@highresolutions.com](mailto:cmhmarket@highresolutions.com) for help.